

ClearOne® **Aura**™

Quick-Start Guide



UNITE® **10 Webcam**

CONTACT INFORMATION

Headquarters

5225 Wiley Post Way
Suite 500
Salt Lake City, UT 84116
US: +1.801.975.7200
International: +1.801.975.7200

Aura Sales

US: +1.888.HEY.AURA
International: +1.801.975.7200
aurasales@clearone.com

Aura Tech Support

US: +1.888.HEY.AURA
International: +1.801.975.7200
auratechsupport@clearone.com

© 2022 ClearOne, Inc. All rights reserved.
Information in this document is subject to change without notice.
Document number QSG-0127-002 V1.2 January 2022

PRODUCT FEATURES

Video

- Format: MJPEG, YUY2
- 5 Megapixels, Full HD 1080p30 resolution
- Autofocus

USB 2.0

- 4.9 ft. (1.5 m) USB 2.0 cable attached to webcam

Audio

- Built-in digital microphone

Platform Support

- Windows XP/Vista/7/10, Android TV, Mac OS

IMPORTANT SAFETY INFORMATION

Before you set up the camera, read this manual carefully. Follow the setup instructions indicated in this manual.

Keep this manual for future use.

To prevent electric shock, do not remove screws or the camera housing. No self-serviceable parts are inside the housing.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGEROUS VOLTAGE INSIDE THE PRODUCT.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN
AVIS RISQUE DU CHOC ELECTRIQUE
- NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.



Use only in non-tropical locations.



Use only at altitudes of 2000 meters or less.

SEE MARKING ON BOTTOM/BACK OF PRODUCT

INSTALLATION & USE

1. **Connect the USB**

Connect USB cable to Laptop or PC port.

2. **Driver installation**

Driver will automatically install, with status shown at lower right of screen. Once installed, prompt will show camera as ready to use.

3. **Troubleshooting**

a. **No display**

- Check that driver is properly installed through your computer's Device Manager menu

b. **Device is not detected**

- Verify the USB connection between device and PC
- Disconnect and reconnect USB device to PC or try another USB port

COMPLIANCE

Details about compliance for the UNITE 10 Webcam are available online on ClearOne's website (www.clearone.com) in the Resource Library.